


## Installation instructions for Herkules ERSAN

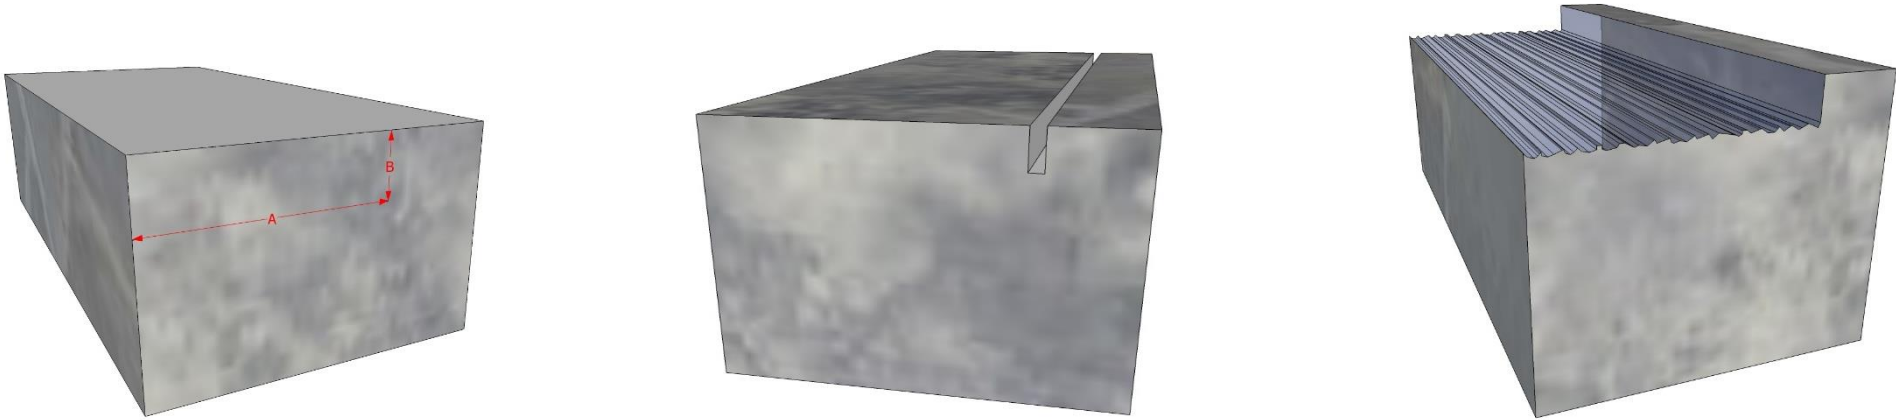


### 1. Chiseling out the area which has to be repaired

At first, make a cut with a diamond blade along the entire length of the joint, with the cutting depth B. Then chisel out the area in between with a jack hammer.

For our profile Herkules ERSAN we recommend chiseling out an area with the following dimensions:

width **(A)** = 20 cm ~

depth **(B)** = 3 cm ~

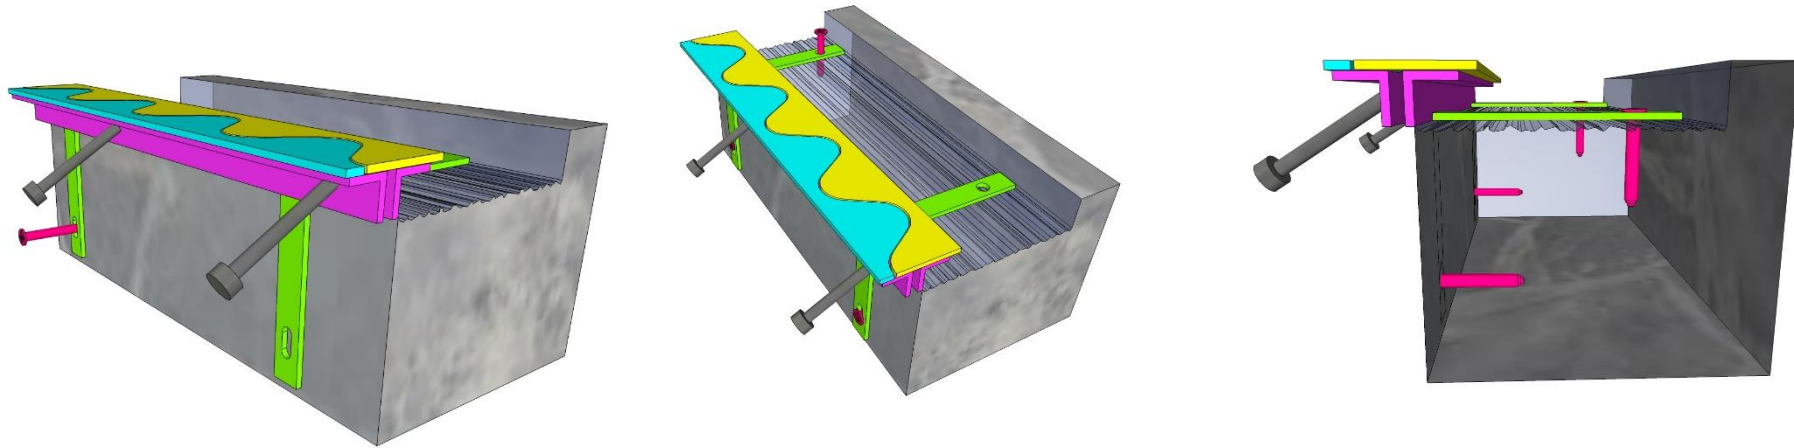


## 2. Levelling of the profile and fixing it to the undersurface

Cut the joint profile to the desired length with a cutting blade. With an axis longer than 2500 mm, extend the individual profile elements by using the integrated screw connections. The profile head has to be horizontal and level with the top edge of the existing foundation slab. For this, support the mounting brackets of the profile with some sort of bolster plates in order to achieve the correct height.

The mounting brackets of the profile (front side) have elongated holes. Start with fixing the profile using the appropriate screws on this front side. The elongated holes offer an additional possibility to adjust the profile to the correct height.

Afterwards, fix the top mounting brackets to the undersurface. The joint profile is now fixed with the mounting brackets and screws to the undersurface and can now be friction-locked to the existing foundation slab. The screw holes have a diameter of 8 mm.


Our joint profiles require no extra fixing systems and work with all common concrete screws. Please consult with the responsible manufacturer and take into consideration the information about the building site and the local conditions. We recommend the screws by the manufacturer *HILIT* due to the easy application and many years of good experiences.

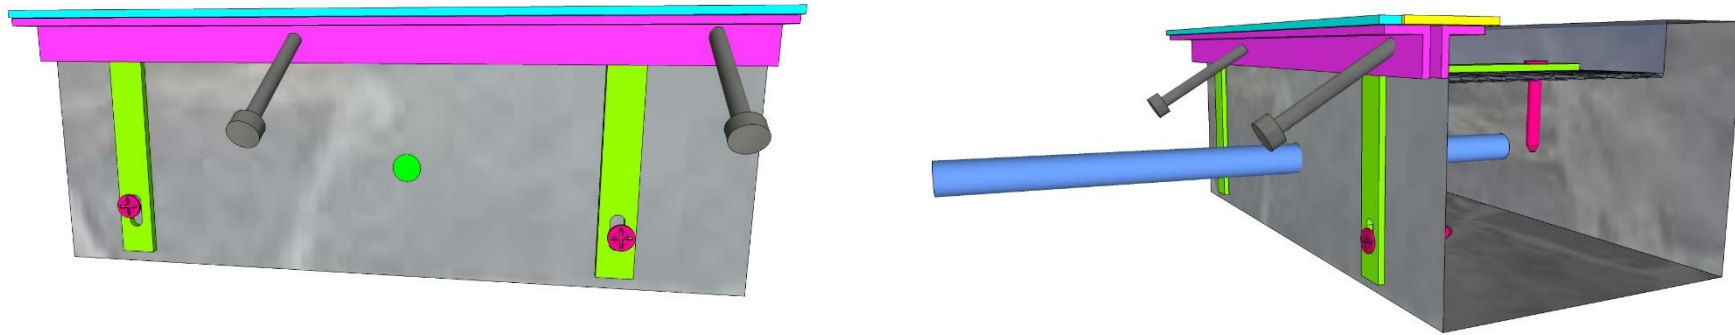

### 3. Load transfer doweling

In order to avoid height offsets in this area, we recommend to use load transfer dowels. For the installation of the dowels, you have to drill holes at the front side of the existing foundation slab. The diameter of the drill holes has to be 2 mm bigger than the diameter of the load transfer dowels. The depth of the drill hole can be exact, no excess necessary. The drill holes should be blown clean so that the dowels can be inserted without problem.

Please consult with your responsible building planner / structural engineer and take into consideration the information about the building and the local conditions in order to choose the correct dimensions and positioning of the load transfer dowels.

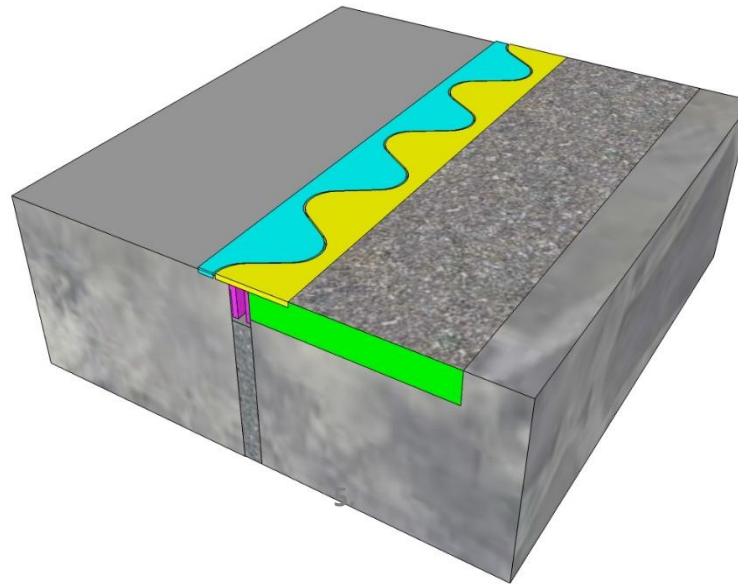

#### 4. Placing the repair mortar

The undersurface has to be cleaned and prepared as specified by the manufacturer. In the end, the chiseled-out area and the profile have to be completely filled and embedded in the repair mortar without any air pockets and screeded level with the surface. At the junction between profile and mortar, please take care to bolster the profile and take a thinner consistency of the mortar, if necessary. When the profile is ready to walk on depends on the setting time of the repair mortar used.


Our joint profiles require no extra repair systems and work with all common repair materials and compounds. Please consult with the responsible manufacturer and take into consideration the information about the building site and the local conditions. We recommend the Rapid Set Repair Mortar by the manufacturer *Korodur* due to the easy application and many years of good experiences.

### 5. CAUTION! Transport locks!

The two-piece profile head is secured with transport locks. These are steel screws with PVC (polyamide) nuts. They are situated on the profile head and are tagged on the drawings below with red arrows. **The PVC nuts will tear off on their own with the subsequent movement due to shrinkage of the foundation slab.** Therefore, no further measures are necessary and best absorption of movement of the profile head can be guaranteed after casting concrete.

**NEVER LOOSEN THE ABOVE-MENTIONED SCREW CONNECTIONS!**


Following are three 3D drawings by way of illustration.

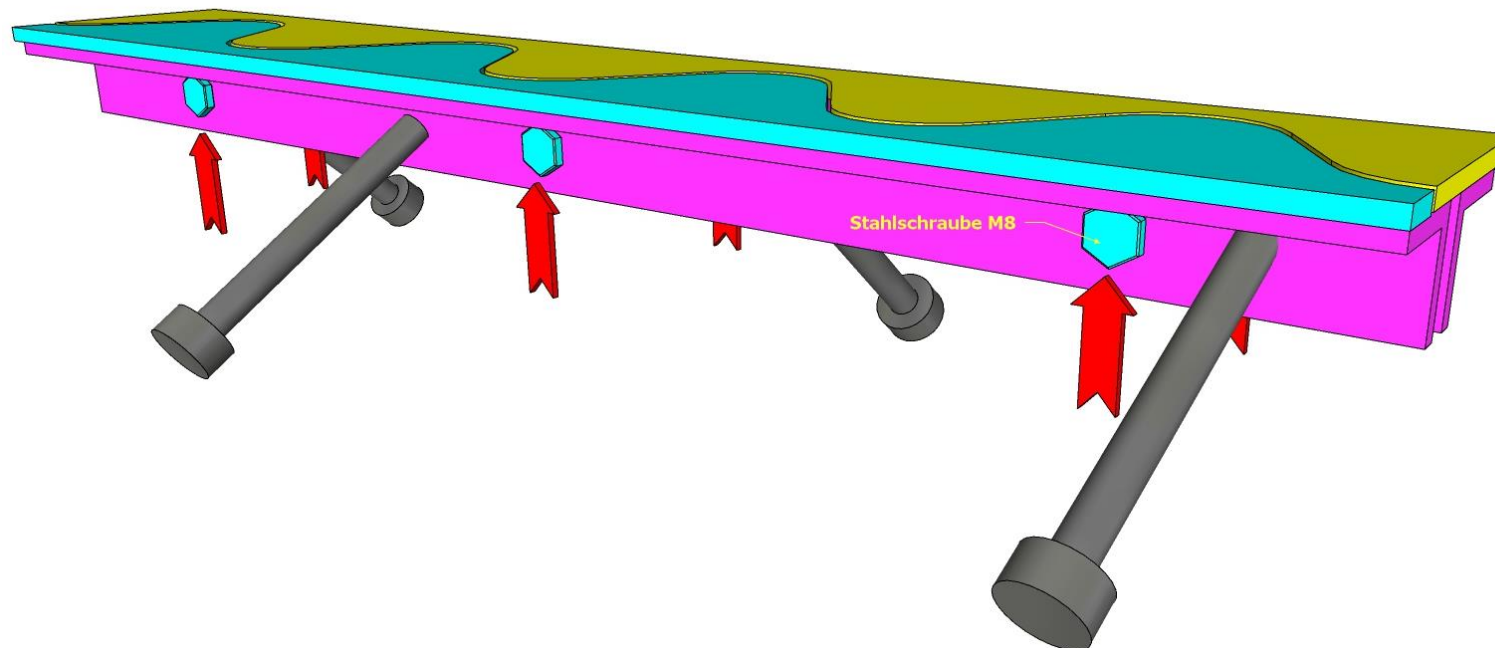



GUGGEMOS GmbH & Co. KG


FUGENPROFILE.DE

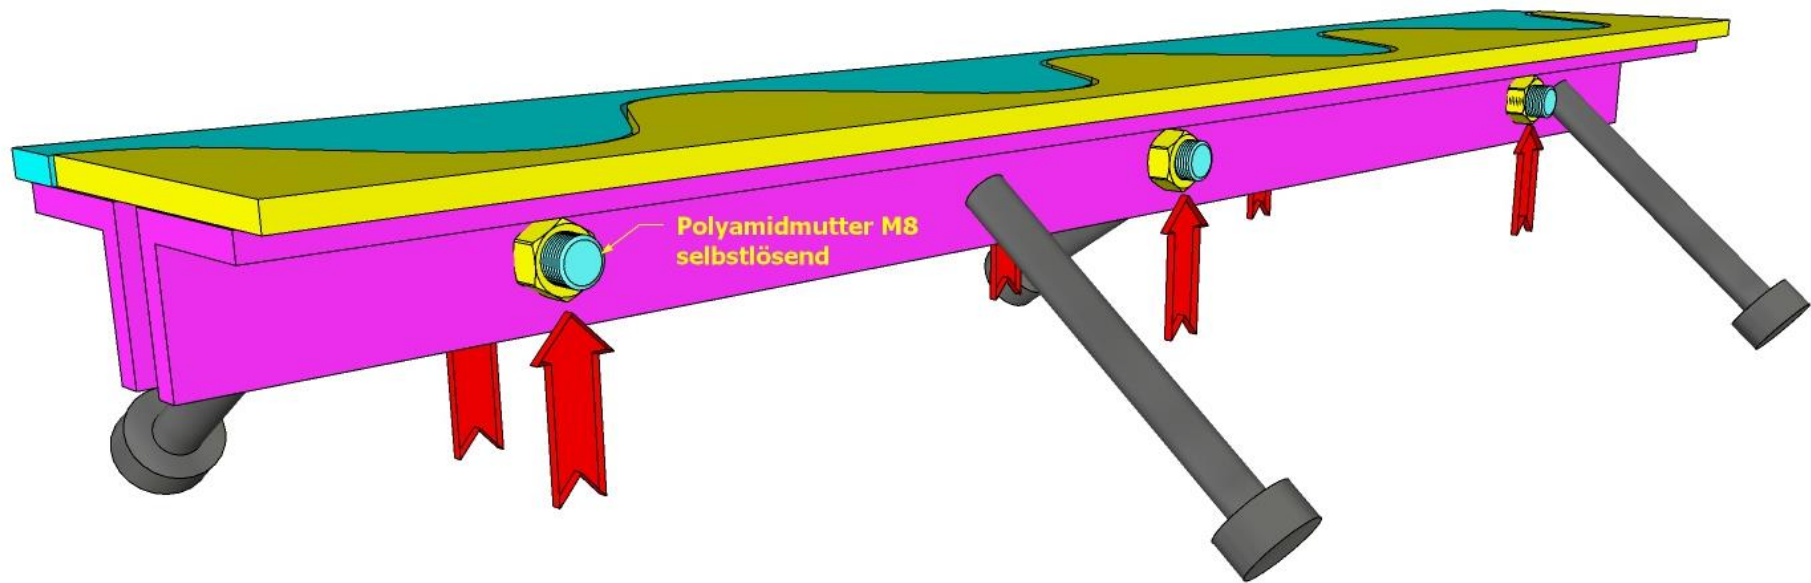



GUGGEMOS GmbH & Co. KG

FUGENPROFILE.DE

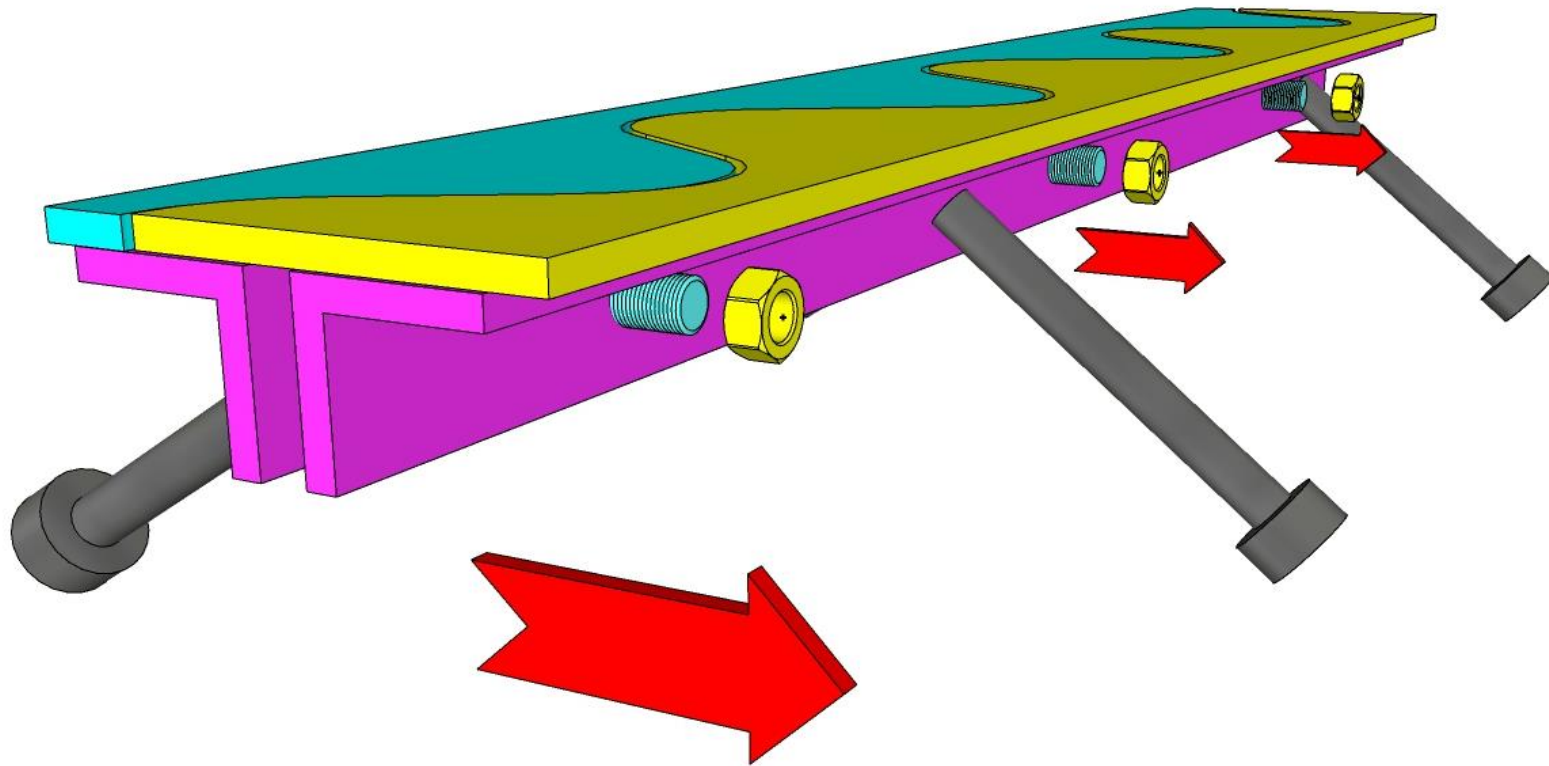

Please note: Our application-specific recommendations correspond with our experiences. We recommend to adjust the installation to the local conditions and refer to our general terms and conditions of sale and our delivery conditions. As a basic principle, we reject any liability claims for above mentioned instructions.